

13-8. RECOMMENDED TORQUE SPECIFICATION

Be sure to torque each bolt and nut according to specification given below, whenever loosened. If specified torque for particular bolt or nut is not included in the list, refer to page 0-13.

System	Fastening parts	Tightening torque		
		N-m	kg-m	lb-ft
Gear shifting control	1. Gear shift control boot cover bolt	4 - 7	0.4 - 0.7	3.0 - 5.0
	2. Gear shift lever case cover bolt	4 - 7	0.4 - 0.7	3.0 - 5.0
	3. Control lever locating bolt	14 - 20	1.4 - 2.0	10.5 - 14.0
	4. Low speed select pin bolt	4 - 7	0.4 - 0.7	3.0 - 5.0
	5. Reverse select pin screw	25 - 35	2.5 - 3.5	18.5 - 25.0
	6. Gear shift lever case bolt	18 - 28	1.8 - 2.8	13.5 - 20.0
Transmission	7. Transmission case bolt	18 - 28	1.8 - 2.8	13.5 - 20.0
	8. Extension case bolt	18 - 28	1.8 - 2.8	13.5 - 20.0
	9. Transmission oil filler and drain plug	20 - 30	2.0 - 3.0	14.5 - 21.5
	10. Input shaft bearing retainer bolt	18 - 28	1.8 - 2.8	13.5 - 20.0
	11. Clutch release arm nut	10 - 16	1.0 - 1.6	7.5 - 11.5
	12. Reverse gear shift rim bolt	14 - 20	1.4 - 2.0	10.5 - 14.0
	13. Transmission oil level plug	10 - 16	1.0 - 1.6	7.5 - 11.5

